

# NEBO<sup>®</sup>

## FRANKLIN™ TASKBAR

Before operation, open the battery compartment and remove the round battery spacer disc.



### OPERATION

Press & release power button to turn the unit off and on and cycle through light modes:

**Spot > COB > Red COB > Red COB Flash > Off**

From Spot, COB and Red COB, press & hold power button to adjust brightness.

When light is ON for 8 seconds or longer, the next button press will turn the unit off. Press & Hold function will ignore this 8 second timeout so that the light can be dimmed.

**Memory:** From OFF, double-tap button

**Direct-to-Red:** From OFF, press and hold power button for 2 seconds



### BATTERY

This unit is powered by 3x Alkaline AA batteries.

**DO NOT** mix old and new batteries.

**DO NOT** mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-MH, etc.) batteries.

### PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or [www.nebolights.com/contact](http://www.nebolights.com/contact)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](http://NEBOLIGHTS.com)